


Transferring Applications to fx-GC20 Through Computer


1. Select the Link function from the Menu




2. Make sure Cable type is USB (Change using F4)

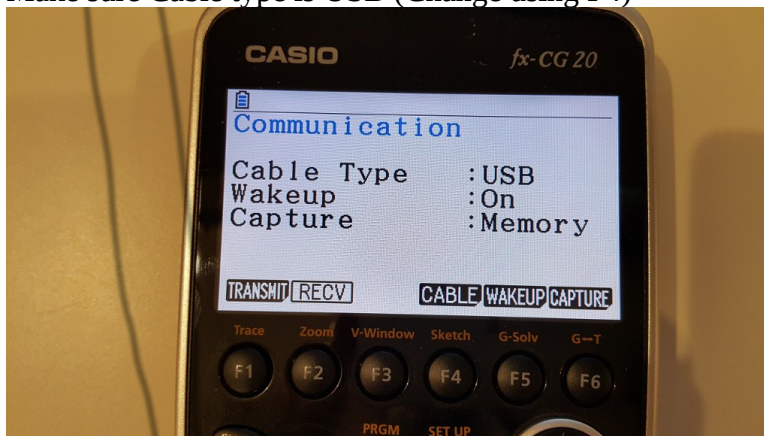




3. Connect the provided USB cable to both computer and calculator. Select "USB Flash" using F1 to connect as flash drive.

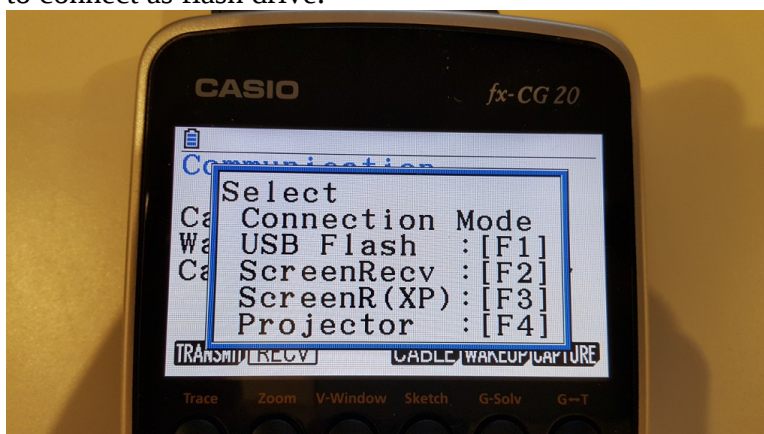

4. When connected this screen will show:

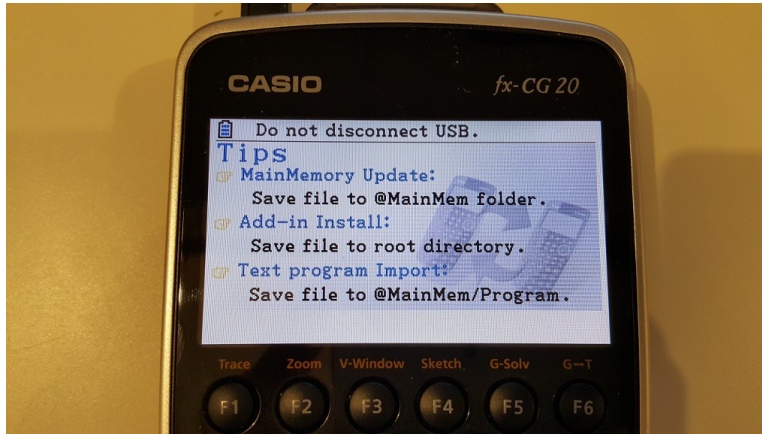

5. Go to @MainMem then PROGRAM and copy the file to that location. All user programs must be located in: "@MainMem/PROGRAM"

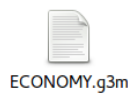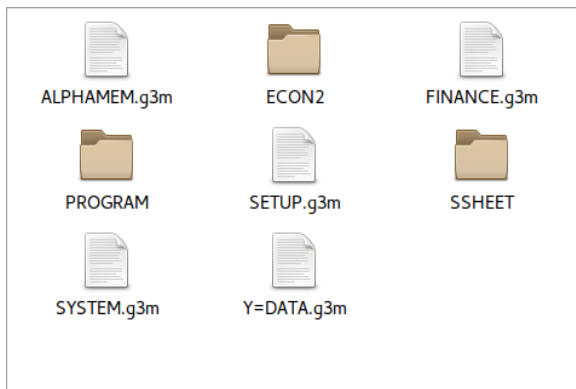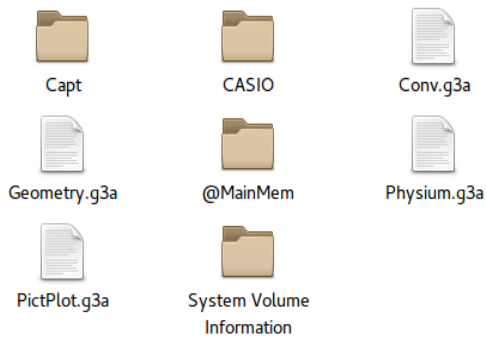

6. Always Safely remove USB storage from computer or press “AC” or “Shift+AC” on calculator to safely remove from calculator before removing the cable.

23/10/2016

Ahmad Hadeed

hadeed-power.com